


## Vertical Blinds: Fitting instructions

---

### Fitting the head rail

---

1. For top fix brackets, affix the brackets to the ceiling or lintel with holes drilled on a line at least 75mm away from the window/glass (this is enough room so the slats will clear any handle on your window). The end brackets should be about 40mm from the ends of the track, and any remaining brackets should be spaced evenly between these two brackets.

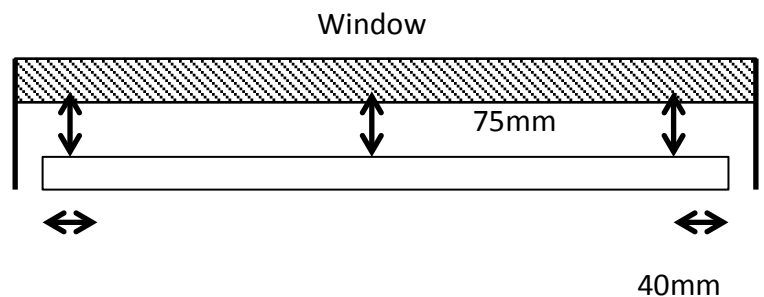

The tails on the brackets are to make it easier to release the head rail if you ever need to remove it. Ideally, put those to the back.

2. Once your brackets are installed, you can fit the track onto them. Keeping the controls to the same side that you ordered them to be on, locate the small lip projecting from the brackets and fit the track's groove onto it. Push it upwards and into the brackets.

### Fitting the Louvres

---

3. Turn the hooks on the head rail so that the available slots are at 90° (the open position) to the track, and hang the louvres, keeping all the seams facing the same way.

Please note: If the slats are clipped on in the closed position, they will not move. You will need to remove the louvres and re-attach them in the open position for them to work fully.

### Screws

---

We supply wood screws with your blind, but if you're fixing the brackets onto anything else such as cement, brick or plaster, you'll need to make sure you pick up the right fittings from your local DIY store.